



# Samsung SGH-A237 Camera Replacement

This guide will show the steps for replacing the camera of the Samsung SGH-A237.

Written By: Jonathon



## INTRODUCTION

The guide will instruct how to change the phone camera without prior experience.

---



### TOOLS:

- [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Position Placement



- Place the phone on a flat surface with the camera on the top facing you.
- Have an organized space for each small part.

## Step 2 — Remove Soft Screw Covers



- Open the phone.
- Locate two small rubber circles found below the viewing screen. These are soft screw covers.
- Use tweezers or pick to remove soft screw covers.

### Step 3 — Remove Small Screws



- Loosen the screws under soft covers on both sides using a Philips screwdriver.

### Step 4 — Detach Black Plate





#### Failure to Utilize the Specified Tool May Cause Damage to the Device

- Locate black cover plate on the back side of the viewing screen; it contains the AT&T logo and the word Samsung.
- Viewing phone from the side, look for the crease in between the black cover and silver part of phone.
- Use a prying device to pry off the cover plate.




## Step 5 — Detach Metal Bracket

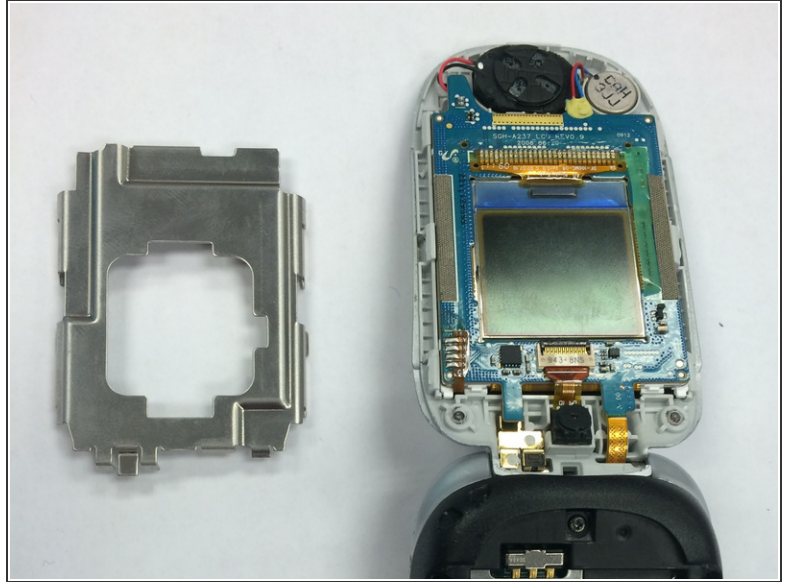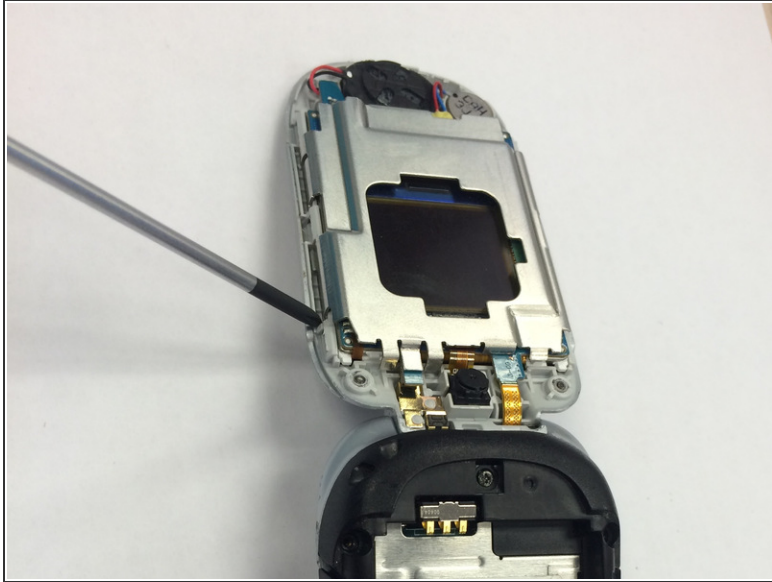

 Failure to Utilize the Specified Tool May Cause Damage to the Device


- Identify the metal bracket covering the internal body.
- Identify the metal tabs around the bracket.
- Get a small pick or regular screwdriver.
- Remove metal cover bracket using the small pick or regular screwdriver.
- Close the phone.

## Step 6 — Locate Black Connector

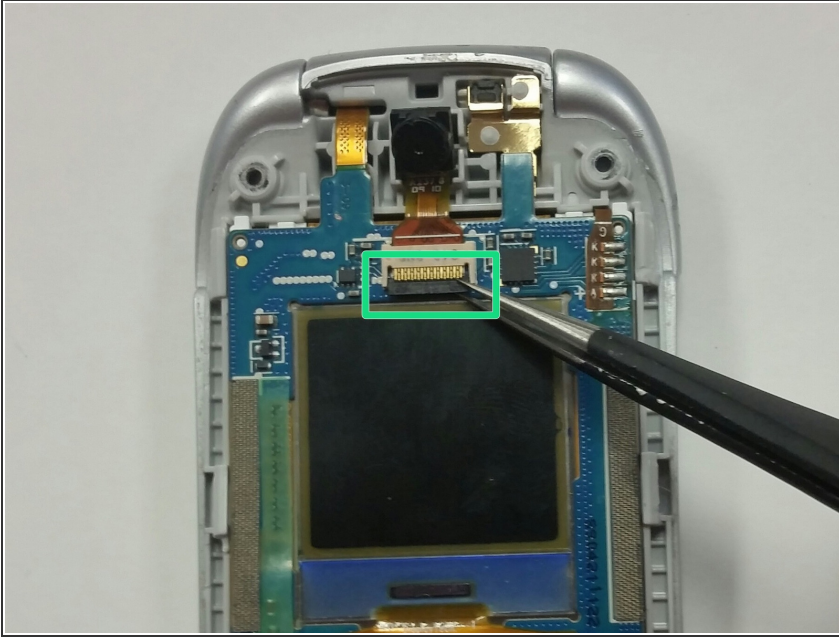

- Find the camera on upper part of phone. (small black circle).
- Follow the ribbon connected to the camera downward to the black connection port.

## Step 7 — Flip Black Connector


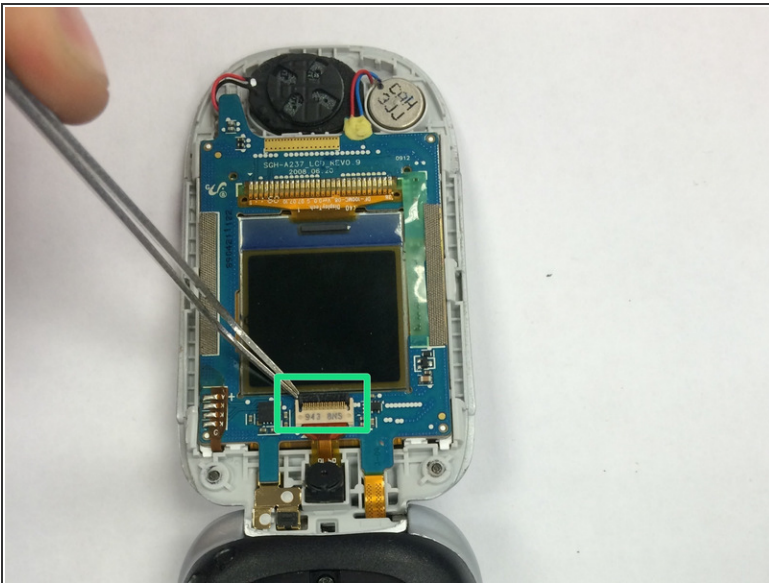


 Failure to Utilize the Specified Tool in the Proper Way May Cause Damage to the Device

- Use pick to pry up the black connector.
- The black connector should lock into place remaining in an upward position.
  - The ribbon connected to the phone's camera will be released.




## Step 8 — Detach Ribbon

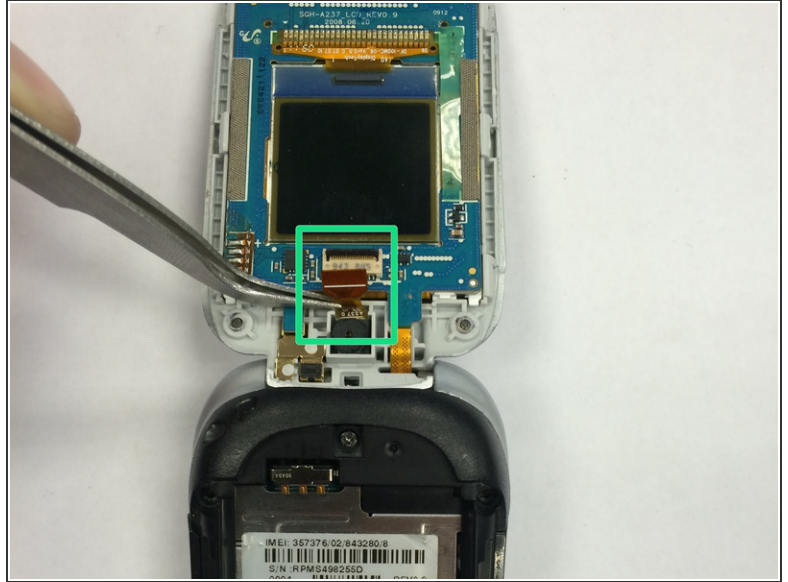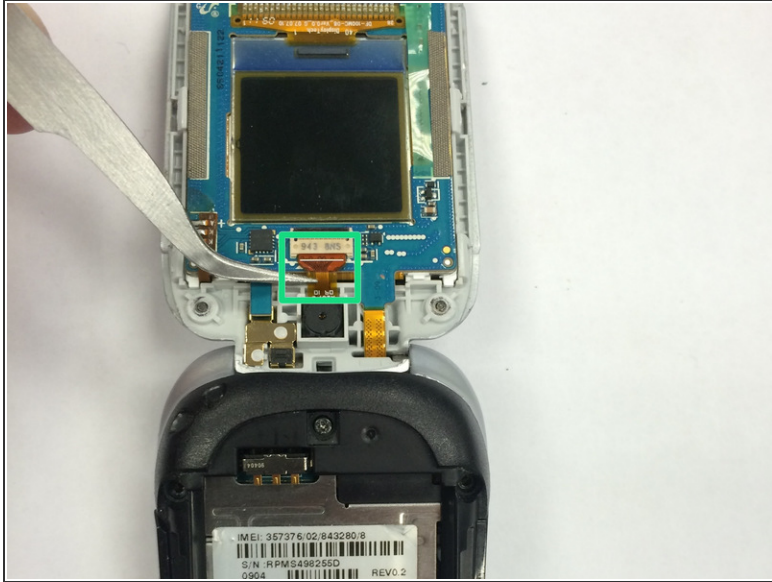

- Use tweezers to gently grasp the ribbon attached to the camera.
- Gently pull ribbon toward the camera.
  - The ribbon should come completely out.

## Step 9 — Replace Camera

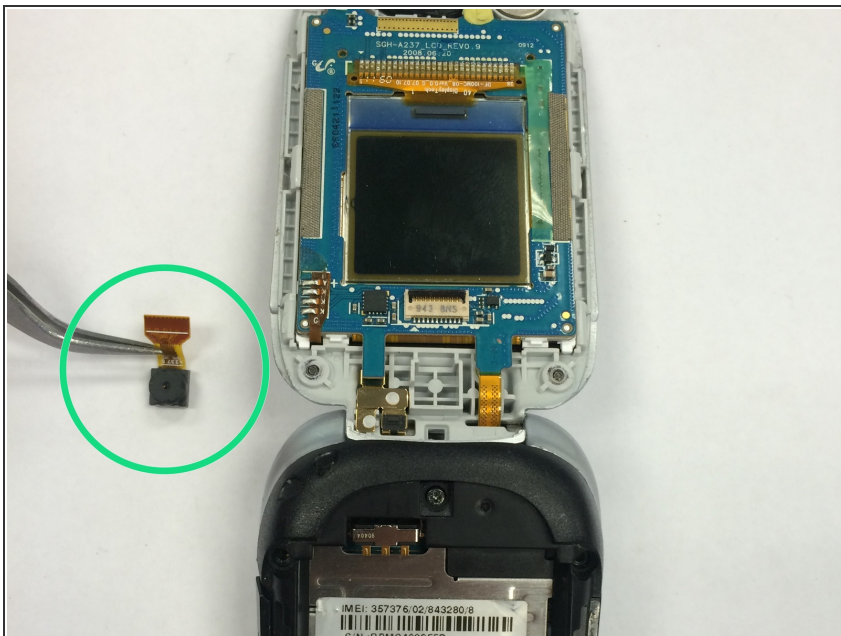

- Remove the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:20:41 PM.